



CLOUD NINE®

Style Infinity

The Micro Iron

**Quick start
and safety
guide**

Using your micro iron to smooth, flick, curl or straighten

- Remove your iron from its heat resistant guard
- Plug into the mains and turn on using the power switch on the side of the iron
- The green power light will flicker then flash steadily when the optimum styling temperature of 150°C is reached
- Only use the micro iron on clean, dry hair
- When you have finished styling turn the iron off using power switch and unplug from the mains
- After use place the micro iron into its heat resistant guard and store in a safe place
- Never wrap the cord around the iron

The micro iron product features & warranty information

This product comes with a 3 years manufacturers warranty. In order to qualify for your 3 years manufacturers warranty you must activate it by registering your product online at www.cloudninehair.com within 14 days from date of purchase. This does not affect your consumer rights.

Please read this section carefully before you use your new styling product. For full product information, styling hints, tips and to register your product or for helpdesk information, visit www.cloudninehair.com.



1. Ceramic plates
2. Power light
3. Power switch

The micro iron product safety

Don't use your styling product near water.

Please do not place on fabric or soft furnishings when the irons are hot.

Always allow the iron to cool completely before storing.

Do not wrap the power cord around the iron for storage.

Don't contaminate any part of your product with any chemical, hair colour or dye.

Don't use on wet hair.

Always unplug from the mains power supply immediately after use.

Clean your product by gently wiping with a damp lint free cloth, do not use sprays or detergents.

Never immerse your product in water and always switch off and unplug from the mains power supply before cleaning.

General iron safety

Your iron can get incredibly hot so please do keep away from skin and be careful when operating.

Always closely inspect The Cloud Nine® Iron for damage before you use it. If the iron is damaged in any way do not use it. Instead go to our website for help desk contact details.

Do not touch the ceramic plates when the iron is switched on.

Keep hairsprays and styling aids at a safe distance away from your iron.

Safety features

If the iron is continuously beeping or ringing, please stop use straight away as this does indicate an internal fault.

Hibernation mode - The intelligent sleep technology within the micro iron will automatically work when the micro iron has been switched on but not used for a period of 30 minutes. Once in hibernation mode the power light will turn off and the micro iron will cool down. When you're ready to use your micro iron again simply switch it back on again using the power switch.

Voltage

The Cloud Nine® Micro Irons can be operated with a mains voltage ranging from 100-240 Volts ac 50/60Hz, 20W.

Operation Failure

If your styling product fails to work please follow this guide:

Check that your product and the power supply are switched on.

If your product, cable or plug become damaged in any way stop using it immediately and return your product to our service centre for repair.

Under no circumstances should you or anyone else tamper with the product as this will invalidate your warranty.

Remember

It's important that you never use your styling product for anything other than styling hair as directed in the quick start guide. Your product has been specifically designed for this purpose and using the product for any other purpose could be dangerous.

Please remember to keep your original proof of purchase in a safe place. This product benefits from a 12 month warranty, subject to terms and conditions.

This appliance can be used by persons aged from 16 years and above. If persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge use this product, an adult responsible for their safety must ensure that they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, or it's service agent in order to avoid a hazard.

Model No. SR103AN (C9-J1.0)



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Also by Cloud Nine:

The Cloud Nine® Iron

Smooth, flick, curl or straighten, create perfect straight and sleek styles

The Cloud Nine® Wand

Sculpt beautiful and professional curls, with one-touch temperature control

The O by Cloud Nine®

Create volume, body and movement, with the ultimate heated roller system



CLOUD NINE®

**A2 HORNBEAM SQUARE WEST
HARROGATE, HG2 8PA, UK**

www.cloudninehair.com